## **HOW TO ASSEMBLE**

THE RAISED

**GARDEN BED** 

WITH A

**NET/PVC** 


**COVER** 



SIZE INFORMATION

### PARTS AND ACCESSORIES



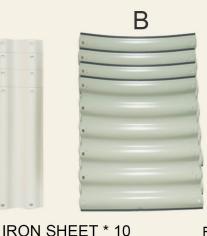










SHORT SCREWDRIVER \* 1

LONG

GLOVES \* 2 **RUBBER STRIP \* 1** 

SCREWS AND NUTS \* 60

# ASSEMBLY PROCESS

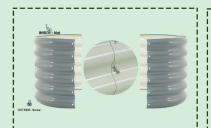

#### STFP 1

Divide the six bent iron sheets (B) into two groups, with three pieces in each group, and install one iron sheet (B) with short screws and nuts to form two semi-circular panels.



#### STEP 2

Divide the remaining four flat iron sheets (A) evenly into two equal parts, and install them using short screws and nuts to form two flat plates.



#### STEP 3


Following the illustrated sequence, assemble the four pre-assembled panels Connect the flat and circular plates as indicated by the arrows in the figure, leaving some holes close to the top edge to connect the roof poles



#### STEP 4


Apply the rubber strip onto the top edge for safety, and the raised garden bed is ready for use.

# LIST OF PIPES AND CONNECTORS

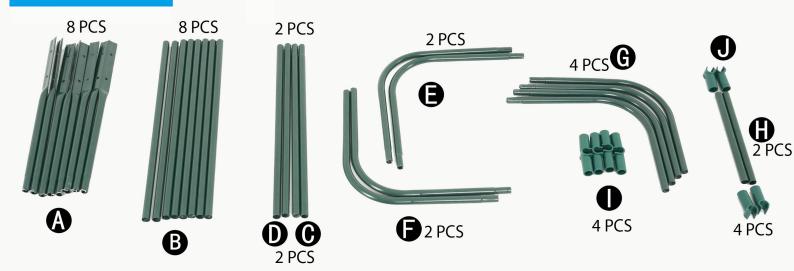







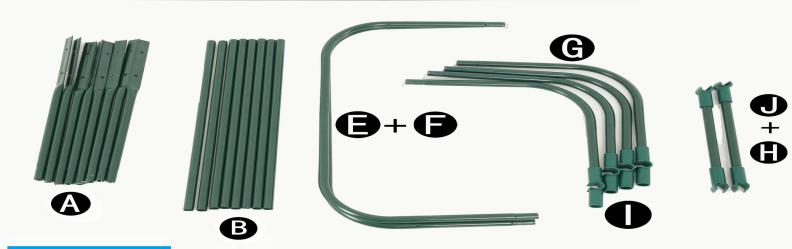

## STEP 2

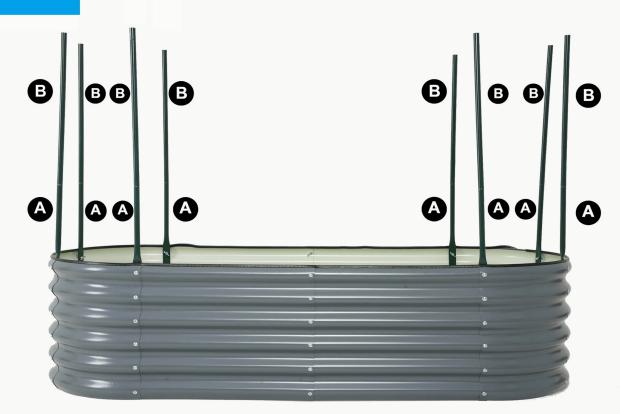

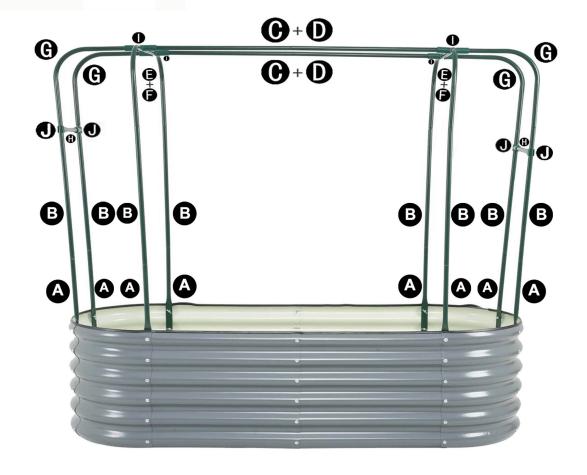

RAISED GARDEN BED WITH A NET/PVC COVER



